

Securing Excavations

The work site must not be left unattended at any time unless all open excavations on the work site have been properly secured:


- Place plywood over the cables, and secure by placing soil bags on the plywood (minimum **1 ft.** cover of sand/soil).
- Where excavations are too large to cover, the excavation must be secured with barricades (at least one must have a contact phone number), snow fence, and barrier tape.

In situations where an excavated site will be left overnight with energized cables and it is not practical to secure the cables, site security personnel will be retained by the contractor to ensure public safety.

Excavation Backfill

Notify EPCOR's Land Services Inspection team during business hours at 780-412-4591 prior to any backfilling.

BACKFILL REQUIREMENTS FOR CABLES AND DUCTS

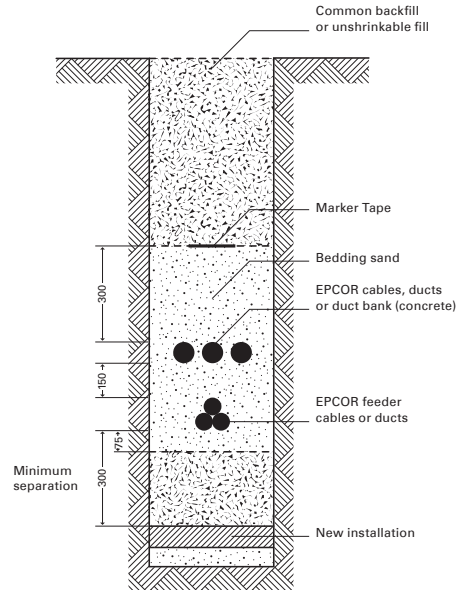

NOTE: all dimensions are stated in millimetres and are minimum requirements